



## F99014 MV Agusta Outer Fuel Line Assembly Instructions

Fast By Ferracci Inc  
1901 Davisville Rd  
Willow Grove PA 19090  
Tel (215) 657-1276  
[www.ferracci.com](http://www.ferracci.com)

Materials Included in kit:

1. 1- F88900 White Fuel Line Connector
2. 1- F88905 Black Fuel Line Connector
3. 32"- F88501 Fuel Line
4. 4- F99024 14.5mm Fuel Line Clamp

Tools Needed:

1. Hose Cutter
2. Measuring Tape
3. 5mm Allen Wrench
4. Crimping Tool (Ex. Fast by Ferracci F99029)

### Section 1: Removing Body Work/Tank

1. Insert the ignition lock key in the saddle lock.
2. Press gently the tail end as shown in the figure.
3. Turn the key and release the lock.



4. Lift the tail.



5. Remove electrical connector from under driver's saddle.



6. Remove the rubber element. (1)
7. Remove the two nylon pins. (2)
8. Remove the tail.



9. Remove both r.h. and l.h. side frame covers, as shown in figure.
10. First pull out the rear part of the side frame, slowly move it backwards and then take out the front fixing from its seat.



11. Remove the fuel tank rear fixing screw. (1)



12. Lift the fuel tank and move it backwards as shown in the figure.




13. Tilt the fuel tank to the vehicle r.h. side. Disconnect the fuel lines (1), Electrical connector (2) and fuel tank breather (3).



### Section 2: Remove old lines

1. Using a standard screwdriver pry the upper part (1) of the clamp from the lower section.

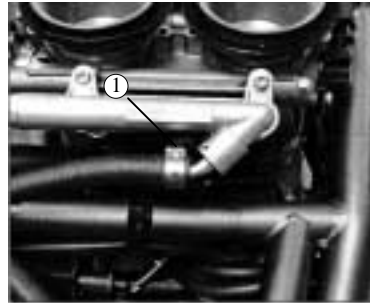

### Section 3: New line Assembly


1. Cut the fuel line in two equal length sections (16" each).
2. Fit the fuel pipes in the throttle body.



3. The fuel pipe with the white connector must be assembled on the throttle body r.h. side.
4. The fuel pipe with the black connector must be assembled on the throttle body l.h. side.



5. Fix the fuel pipes to the throttle body unions by means of crimping tool.

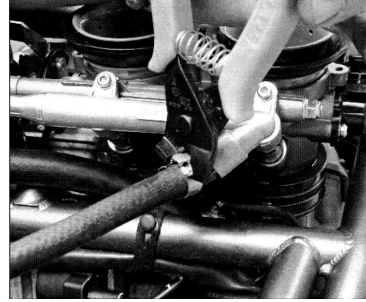

6. Connect the pipes with a plastic tie. Be sure not to cross the fuel lines.



#### **Section 4: Reassembly**

1. Follow Section 1 in reverse